



Attaching the Modesty Flap to the Bio Bin


- 1.** Detach the tab joining the Modesty Flap and the Bio Bin Lid. Discard the tab.

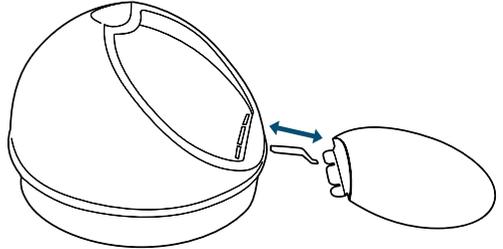

- 2.** Insert the 3 tabs on the Modesty Flap into the 3 holes at the base of the Lid opening. Ensure that the curved lever is facing down.

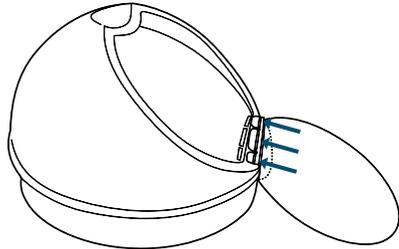

- 3.** Push the Modesty Flap down until it has locked into the lid. Swing the Modesty Flap back toward the Lid.

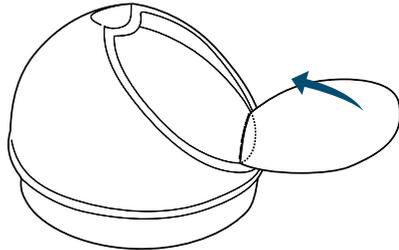

- 4.** The Lid and Refill Cartridge are now ready to be placed in the empty Cylinder.

