



Pod™ Petite

Back wall installation

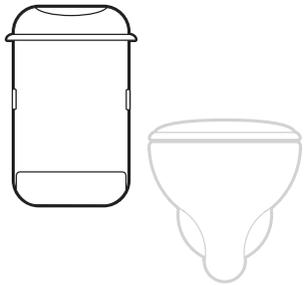


Side wall installation

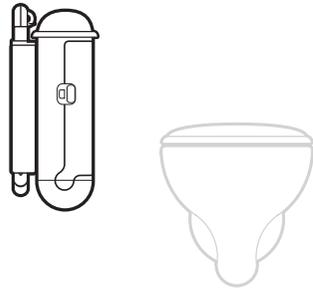


Recommended specifications

Pod™ Petite manual

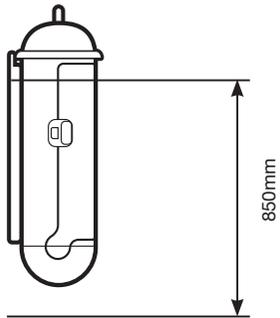


Pod™ Petite auto

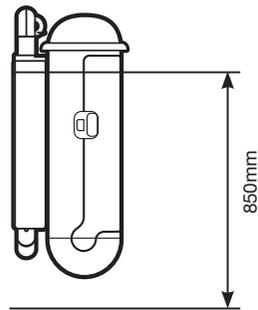

Important:



Wall bracket/sensor box wall plate should be positioned at a height of approximately 850mm above floor for best results. Secure into a wall stud. Use wall anchors if a wall stud cannot be located.

Contents

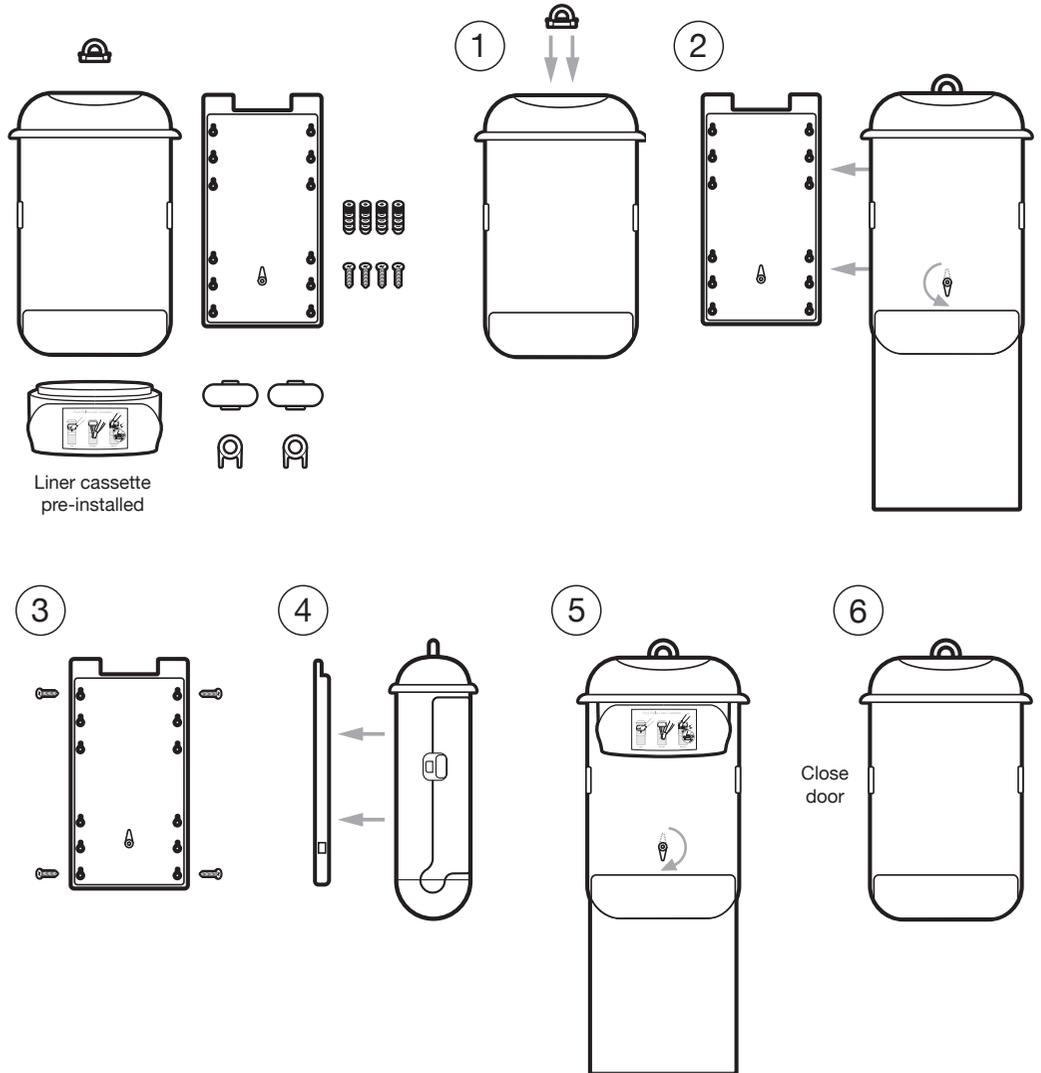


Pod™ Petite Auto – Installation Instructions

Contents

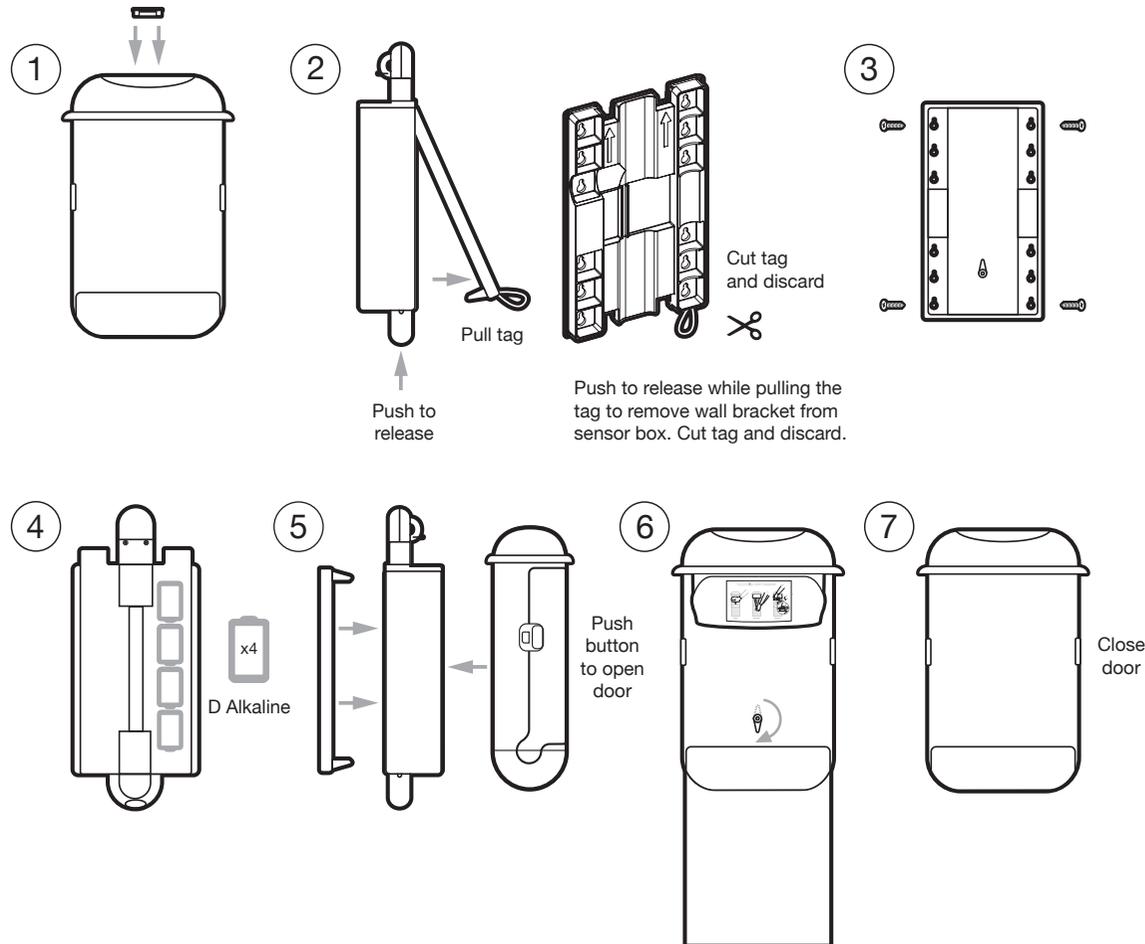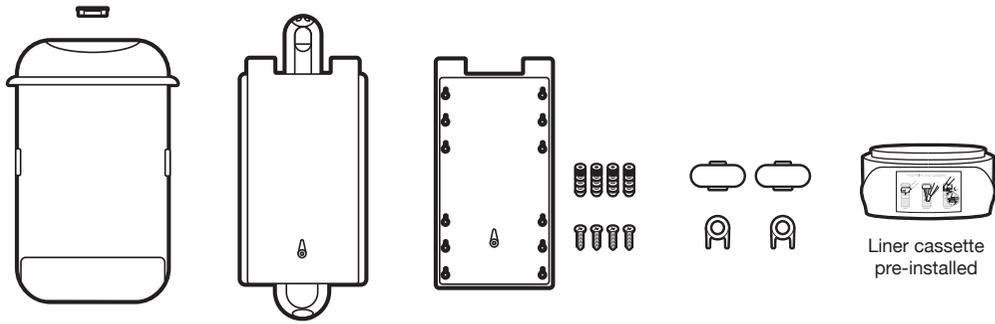


Pod™ Petite Liner Cassette – Instructions

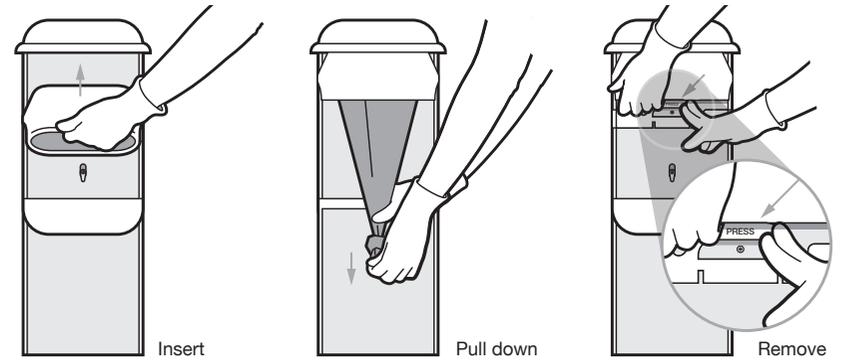

Pod™ Petite Optional Locking Feature – Instructions

Locking Cap




Key



Lock Installation

Opening locked unit

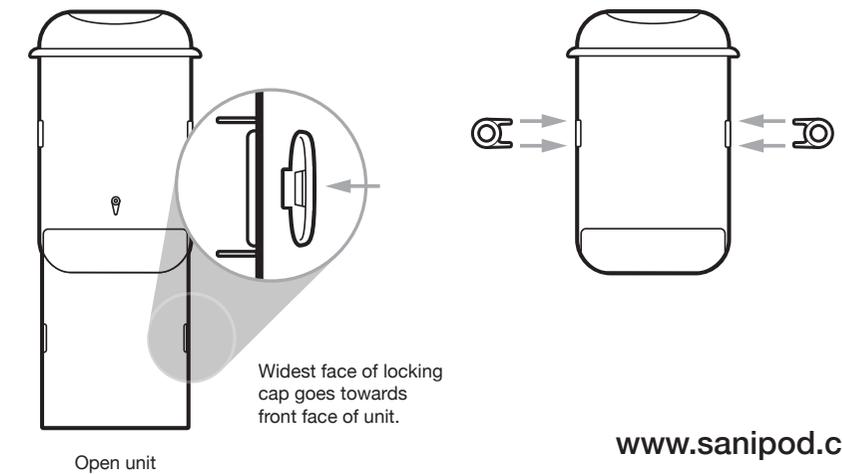

www.sanipod.com

For installation videos and support visit
<http://www.sanipod.com/tools-and-support/>